

USB Setup Instructions

Cyclone, Trident and Phoenix (gold) Braille Embossers

Enabling Technologies

1601 Northeast Braille Place
Jensen Beach, Florida 34957 USA
Toll-Free Phone USA Only (800) 777 3687
Toll-Free Fax USA Only (800) 950 3687
Phone (772) 225 3687
Fax (772) 225 3299
E-Mail: info@brailler.com
Web: <http://www.brailler.com>
Copyright © 1986-2015 by Enabling Technologies Company
All Rights Reserved. Revised April 2015

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form, without the express written permission of Enabling Technologies Company.

Every precaution has been taken in the preparation of this manual to ensure the completeness and accuracy of the information it contains. Even so, Enabling Technologies Company assumes no responsibility for such errors or omissions that may occur. Neither do we assume any liability for damages resulting from the use of information contained herein.

Brand names, company names, or product names mentioned in this document may be trademarks, registered trademarks, or service marks of their respective companies.

USB Setup Instructions

The instructions contained in this manual will show you how to connect your Cyclone, Trident or Phoenix (gold) Braille Embosser to your Windows 7 or higher based computer using the USB cable that was included with the embosser. These setup instructions do not apply to Windows based computers prior to Windows 7.

First, make sure you have installed the software contained on the CD-ROM included with your embosser. The programs may be found in the Start Menu of your Windows computer.

Then, with the embosser turned off plug the USB cable into the back of the embosser and then plug the other end of the USB cable to an available USB port on your computer. Now, turn on the embosser.

Next, your computer will display the “Installing device driver software” bubble. See Figure 1.

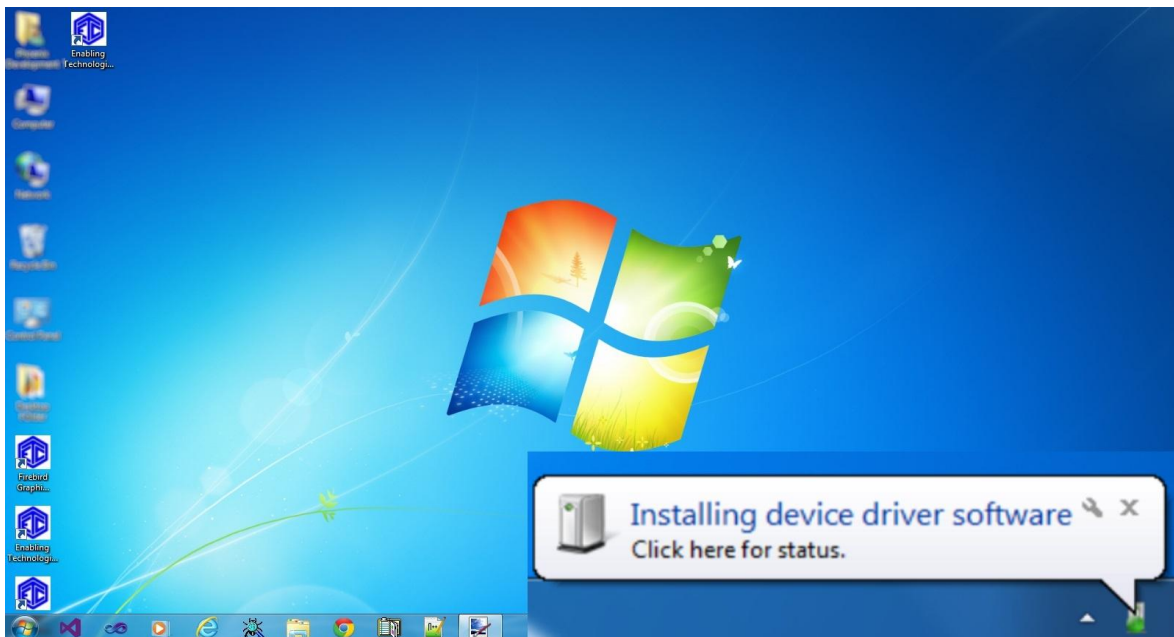


Figure 1

Once the device driver software has been installed your computer will display the “Your device is ready to use” bubble. See Figure 2.

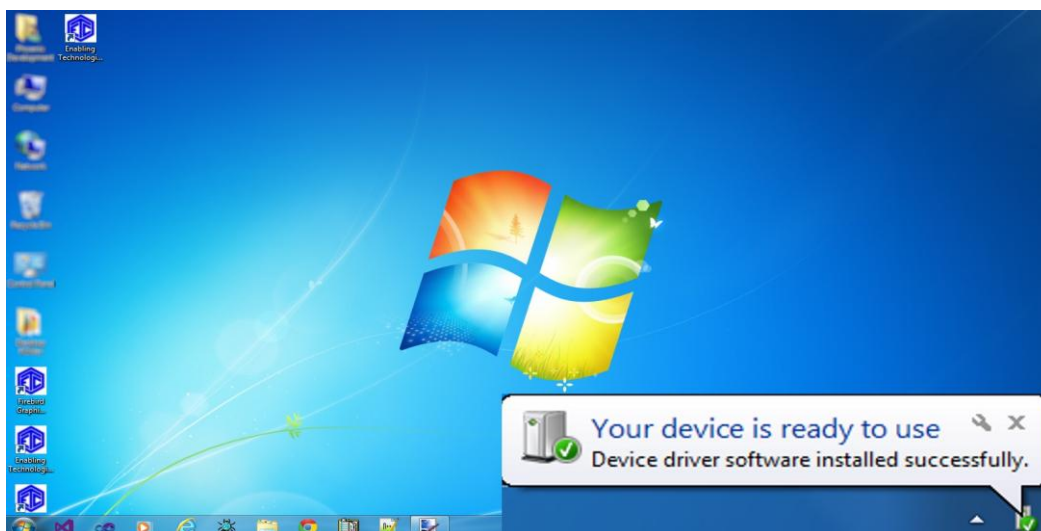


Figure 2

The device driver software was installed as Generic / Text Only. You may leave the driver named Generic / Text Only or you may change it to the name of your embosser. To change the name please follow the steps below.

First, go to the Start menu, then go to Devices and Printers. See Figure 3.

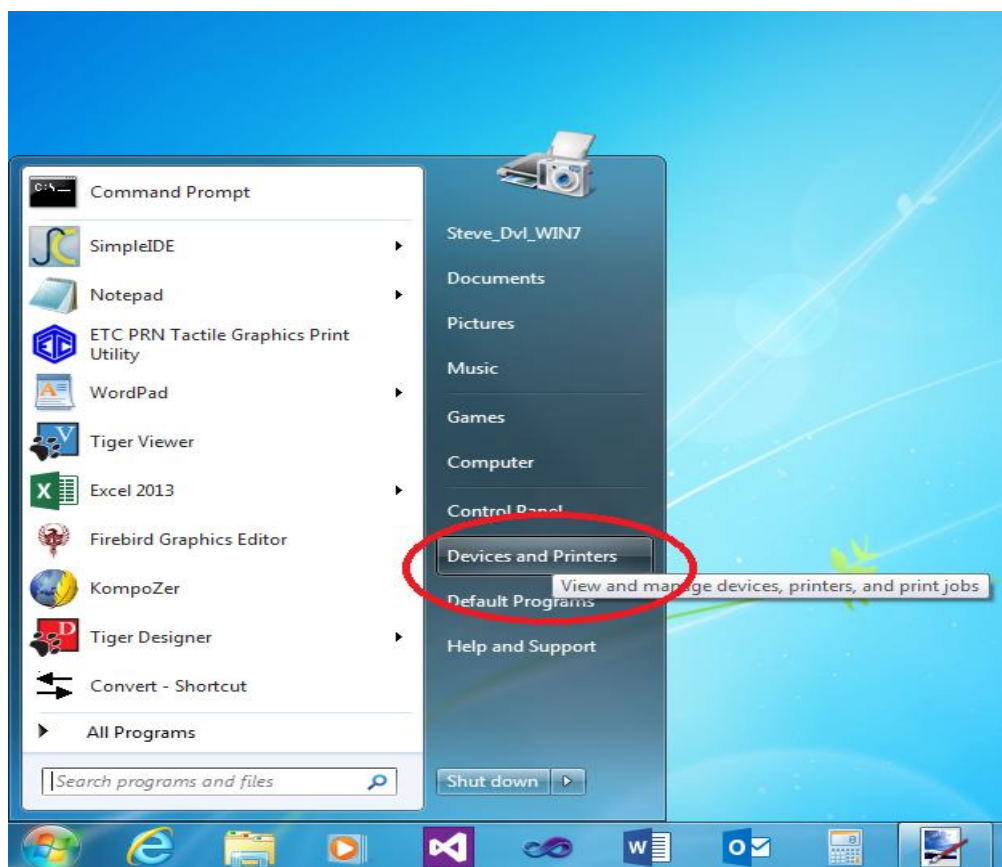


Figure 3

Next, highlight the Generic / Text Only printer. See Figure 4.

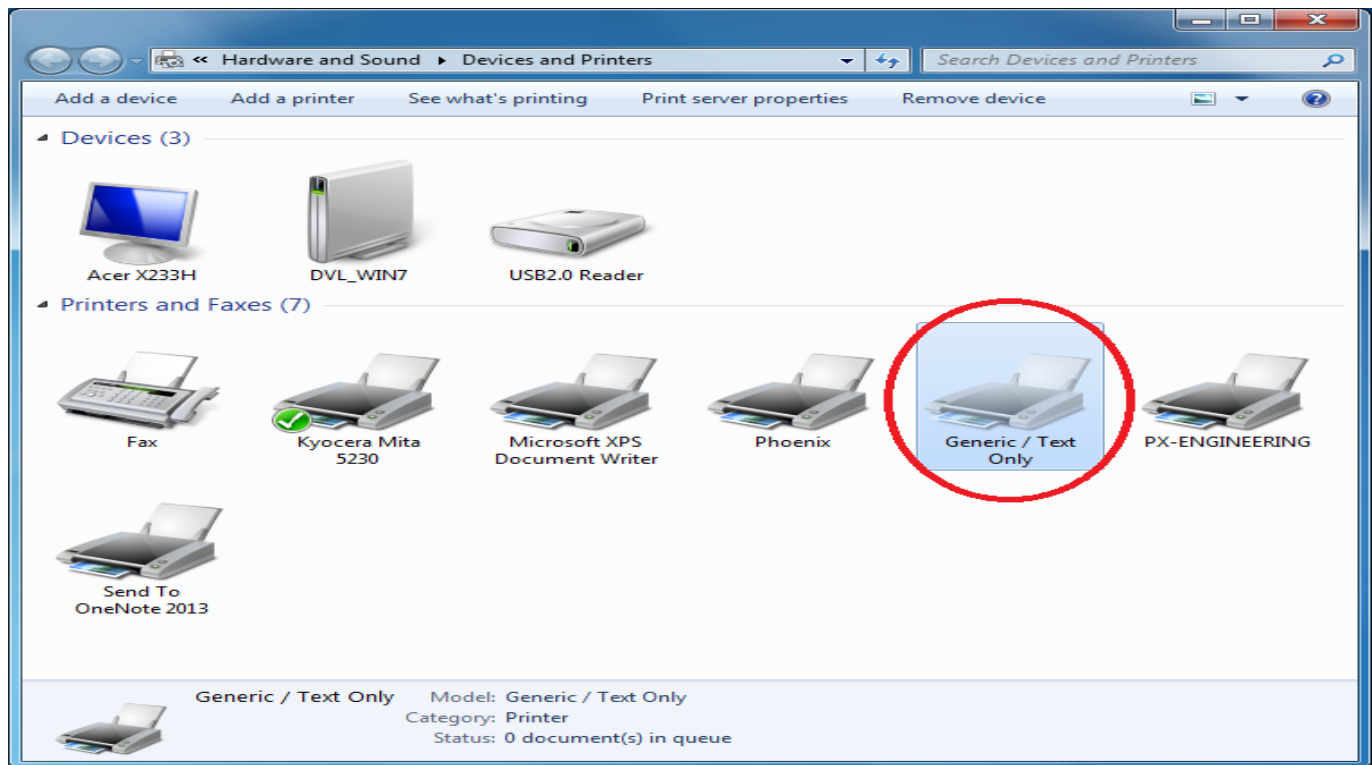


Figure 4

Right click on Generic / Text Only printer and select Printer Properties. See Figure 5.

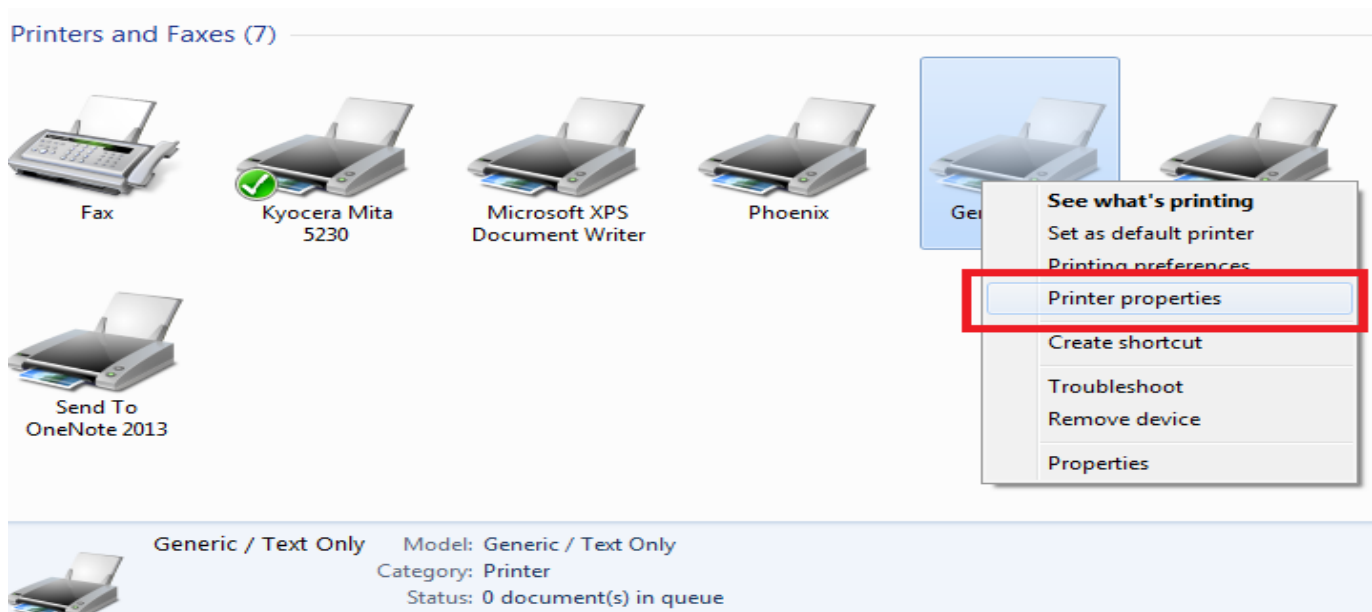


Figure 5

The high-lighted name is currently Generic / Text Only. See Figure 6. To change the name simply type in a new name for the printer. In this example we have chosen the Trident.

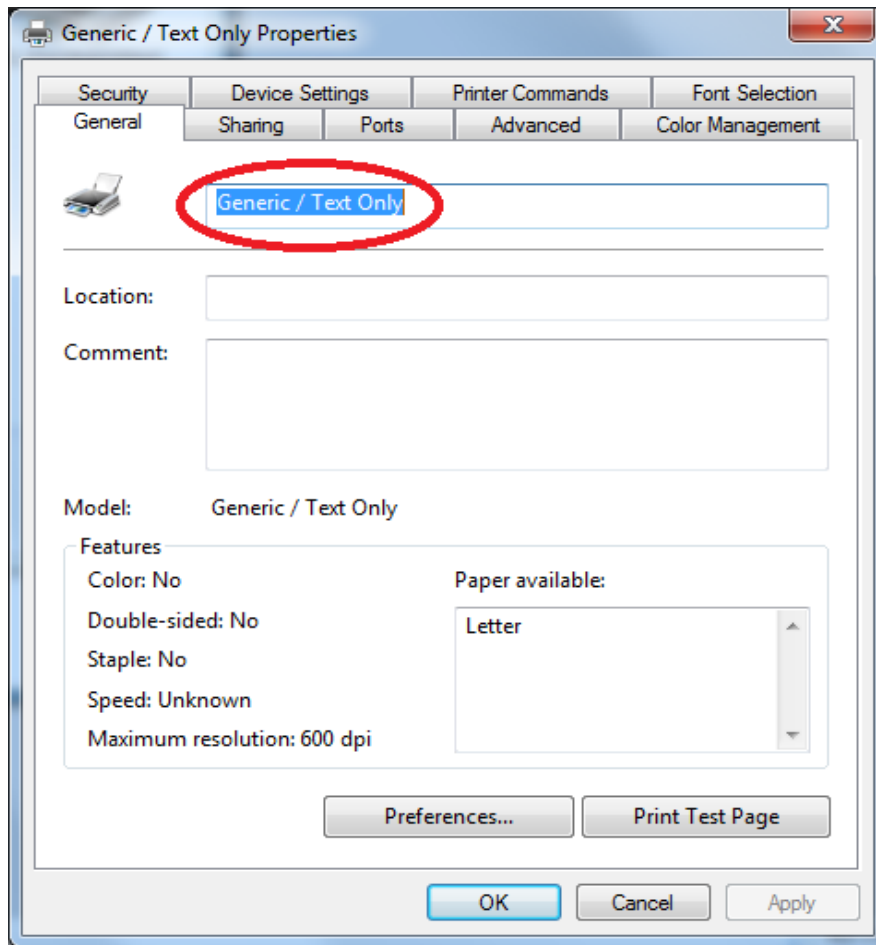


Figure 6

Next, click the OK button. The new name will be saved and it will now appear in Devices and Printers as Trident instead of Generic / Text Only. See Figure 7.

Finally, turn the embosser's power off and then back on.

NOTE: Now you will need to setup up your Braille Translation software to send your Braille documents to the name of the embosser you just installed. For additional information on setting up your Braille translator with your Braille embosser, please refer to the Braille translators setup instructions.

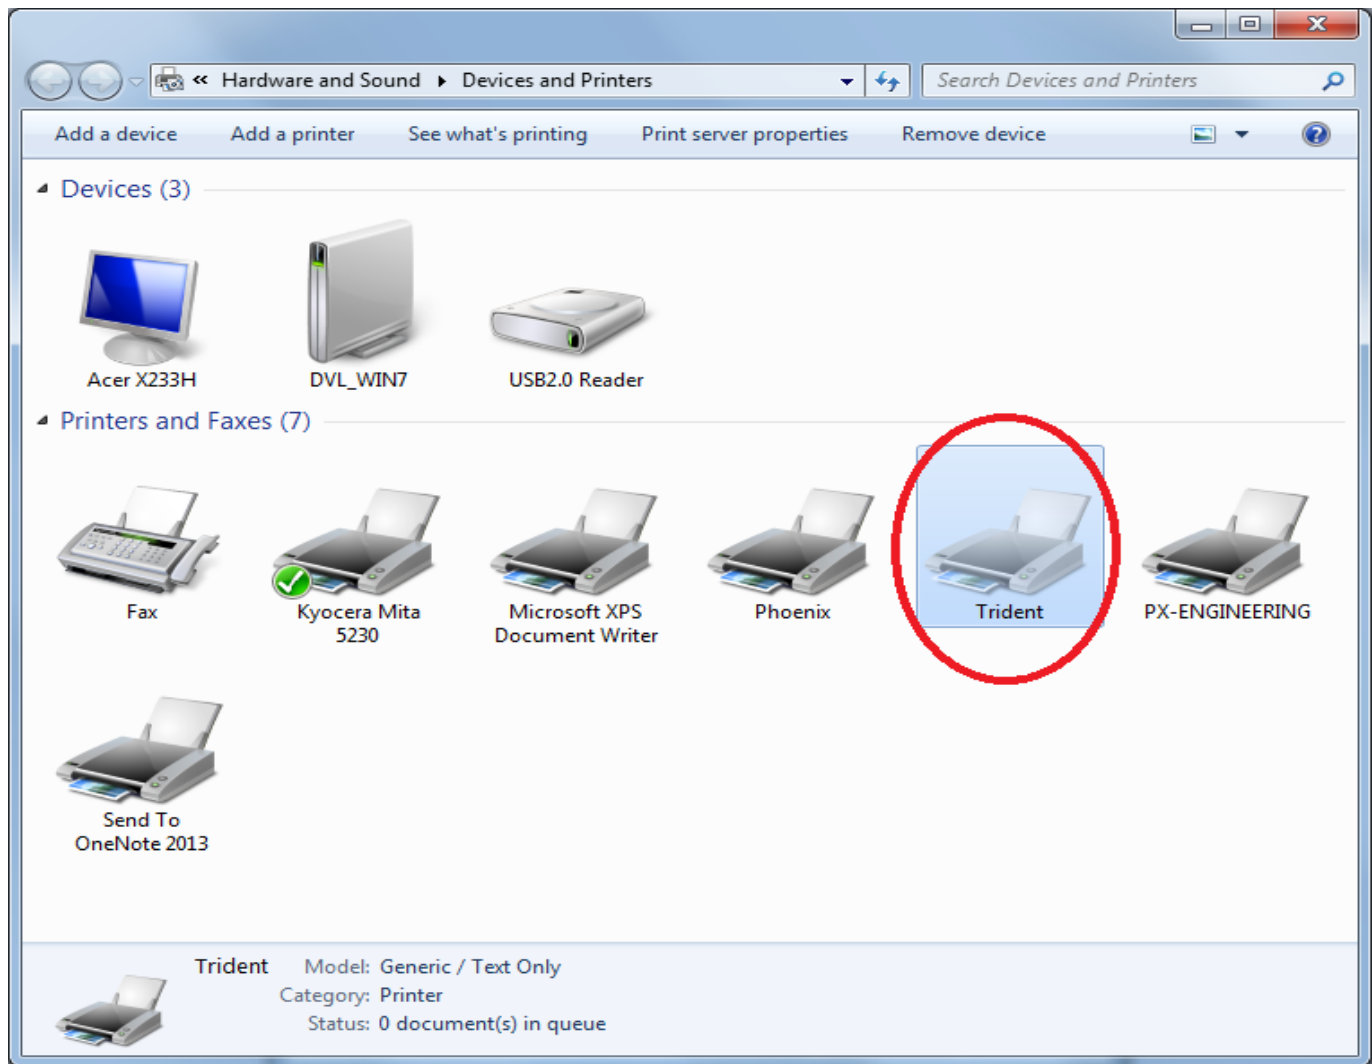


Figure 7

IMPORTANT NOTE: If for any reason you need to unplug the embosser's USB cable from your computer, then make note of which USB port on your computer it was plugged into. You will need to plug the USB cable back into the same port on your computer if you wish to use the embosser on this computer.

If you have any questions about installing your embosser, then please contact our Customer Support Group at 1-800-777-3687 Ext. 218 or by email at support@brailier.com